

**ROUTER COMPATIBILITY TABLE FOR CIRCLE GUIDE MODELS**  
**200, 270, 300, AND 400**

**ALL OF THE ROUTERS LISTED BELOW ARE PLUNGE ROUTERS**

Remove Plastic Sub-base from Router before mounting  
 (Note: Some router bases are not removable)

ROUTER MODEL

SCREW SIZE / # OF SCREWS

<b>Black &amp; Decker:</b> RP 200 and SS 1000 RP	—————→	Use 3 - 10-32 Screws
<b>Bosch:</b> 1613, 1450, RA 1166, 1617/1618 1615	—————→	Use 3 - 4MM Screws Use 2 - 10-32 Screws
<b>Craftsman:</b> 1617-12, 17543, 17517 Digital, 17540, 26620, 28084 Professional 315.268.350	—————→	Use 3 - 10-32 Screws Use 2 - 10-32 Screws
<b>DeWalt:</b> DW 615, DW 616, DW 618, DW 621, DW 625, DW 6182	—————→	Use 2 - 6MM Screws Use 3 - 10-32 Screws
<b>Elu 177</b>	—————→	Use 2 - 6MM Screws
<b>Fein FT-1800</b>	—————→	Use 2 - 6MM Screws
<b>Freud FT 2000</b>	—————→	Use 2 - 10-32 Screws
<b>Hitachi:</b> M8V, Tr12, M12V KM12VC	—————→	Use 2 - 10-32 Screws Use 3 - 10-32 Screws
<b>Makita:</b> 3612C, 3621 RP 1101	—————→	Use 2 - 10-32 Screws Use 3 - 10-32 Screws
<b>Porter Cable:</b> PC7529, PC690 Series, Pc8529, PC894PK, PC895PK, PC8902/8931	—————→	Use 3 - 10-24 Screws
<b>Rigid</b> R2930 (Plunge)	—————→	Use 3 - 10-32 Screws
<b>Ryobi:</b> RE180PL, Plunge Base, R175	—————→	Use 2 - 10-32 Screws
<b>Skil:</b> 1823, 1825, 1835, 1840, 1845-02	—————→	Use 3 - 10-32 Screws